Cashmaster
INTERNATIONAL

omega 230

Cashmaster Omega 230

User Manual

www.cashmaster.com

User Manual

Thank you for choosing the Cashmaster Omega 230 money counter. The Omega 230 is an invaluable, easy to use, and highly accurate money counting device. The Omega 230 is designed to manage your cash intelligently, with accuracy and efficiency. With the Omega 230 you will speed up cash counting and reconciliation up to six times faster than by hand.

Contents

Introduction
- Introduction…… 2

Box Items and Guidelines
- Maintenance…….. 3
- Charging…… 3
- Warning…… 3

Guidelines
- Unpacking…… 4

Keys and Display
- Cashmaster Omega 230…….. 5
- Keypad..... 6
- Tray..... 6
- Screen…….. 6

Cashmaster Key Identification
- Key Identification..…….....……..…… 7
- Fast Keys……..... 8

Getting Started
- What can you count…… 9
- Switching On…… 10
- Setting Date and Time…… 11
- Setting Bank mode..... 12
- Auto Add and Auto Scroll……... 13

Counting
- Coins…… 15
- Learning…….. 17
- Bills…….. 18
- Non Cash..... 20

Storing/Viewing Tills..... 21

Totalling, Clearing and Print…….…… 22

Grams/Calculator Mode……..… 23

Troubleshooting……... 24

FAQ's..... 25

Technical Specification..…… 27

Introduction

Introduction

The Cashmaster Omega 230 is an electronic weighing device which calculates the value of coins and bills. The Cashmaster Omega 230 supports your domestic currency: bills and coins. The intuitive user friendly interface guides you through the cash counting process. The Cashmaster Omega 230 is programmed to count the contents of a typical cash register:

- Bills (loose, banded bundles, clipped bundles)
- Coins (loose, rolled, till cup, other container)
- Cheques
- Tokens/Coupons
- Manual entries ie: Checks, Credit, Debit, Gift vouchers

Using the Cashmaster you will notice some changes in the way you work:

- Reduced paperwork
- Streamlined working mettrays making the business more competitive
- More time to concentrate on Key Tasks

Guidelines

1. Place the Cashmaster Omega 230 on a firm, even surface, away from drafts and vibrations.
2. Insert the HOD, pushing down **VERY** firmly into position until it clicks.
3. Ensure area around the tray is kept clear.
4. The coin scoop should **NOT** be placed on the device before switching on.
5. Plug in the AC adaptor and switch on at the mains.
6. The device is not a counterfeit detector and hence will not detect counterfeit money.
7. Weights may vary from the initial factory setting. It may be necessary to carry out some initial Bill 'learning' in order to quickly adjust the machine to your local conditions.
8. Ensure money is sorted by denomination before counting. Mixed denominations cannot be counted.
9. Do not subject the device to strong impact or shock load by any means.
10. Ensure that money is placed onto the equipment with reasonable care.

Box Items & Guidelines

Cashmaster INTERNATIONAL

Cashmaster Omega 230

Scoop

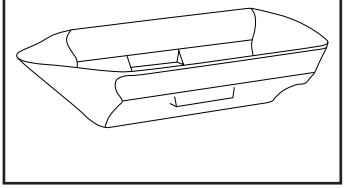

AC Adapter

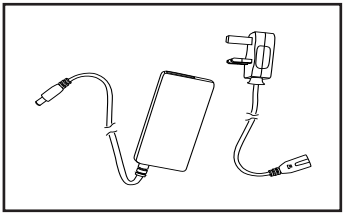

Maintenance

Ensure power is switched off during cleaning.
Clean machine with dry cloth only. *Do not use cleaning products or damp material.*
Do not spill any liquids on device. If liquid is spilled on device, disconnect the power cable and contact your supplier.
Do not leave any objects on the Cashmaster or tray when not in use.

Charging

Charging takes approximately 3 hours.
Only use the device with the factory supplied power adapter.
When the LED is red this indicates that the battery is fast-charging.
When the LED is green the battery is fully charged.
When the LED is flashing the battery is very low and the unit is on slow charge.
If the LED continous to flash for more than 3 hours the battery may have a fault *(in event of this, switch off the power at the mains and contact customer support).*

Warning

Do not use a damaged or wet power adapter.
Do not connect power adapter with wet hands.
Do not place weights over 1.5kg on the device.
Do not disassemble the device, sensitive elements in the scale may be affected and this will affect your warranty.

If any of the above are missing please contact Customer support (toll free) on:
1 - 877 - CASHMAS

Guidelines

Unpacking

1. Unpack your Cashmaster machine and check that you have a Cashmaster scale, a tray and a power adapter.
2. Fit the tray into the top of the Cashmaster scale. Push down **very firmly** until it clicks into place.
   (To remove the tray, hold Cashmaster machine firmly and twist the tray until it clicks, then lift the tray from the base)
3. Plug the power adapter into the socket at the back of the Cashmaster scale.
4. Place the Cashmaster scale on a firm even surface.
5. Ensure the tray is empty (the coin scoop/till cup should NOT be placed on the tray before switching on).
6. Plug the power adapter into the power source.
7. The Cashmaster can now be operated from mains power or from battery. When the battery is low the display will show "low battery, recharge now".

Push down
VERY FIRMLY
until you hear
a click

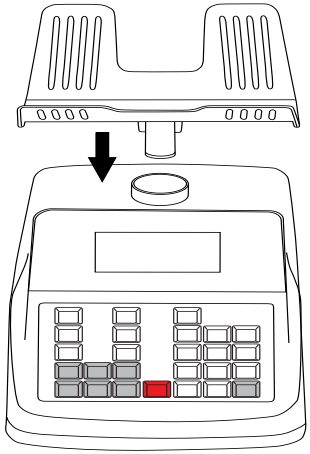

To fully charge the battery, plug the Cashmaster machine into the mains. The LED on the front will show GREEN (for one second) then RED.

(A RED LED indicates that the battery is charging. The charging process can take up to three hours. A GREEN LED indicates that the battery is fully charged and the unit is connected to the external power supply. If the LED continous to flash for more than 3 hours the battery may have a fault *(in event of this, switch off the power at the mains and contact customer support).* No colour indicates that the unit is running on its internal battery.)

Cashmaster Omega 230

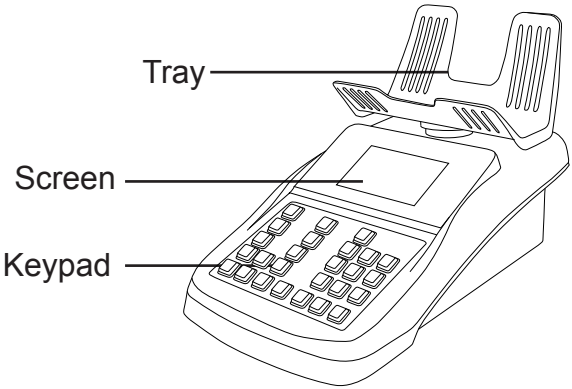

The Cashmaster machine shown above is the equipment you are going to use. You only need to know about three component parts:

- the keypad
- the screen
- the tray

The machine is robust, and will stand up to all normal Cash Office activities. Treat it with sensible care.

Bill Counting	Coin Counting	Roll Counting
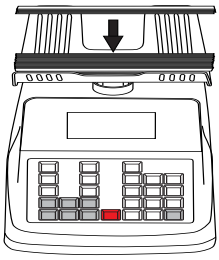		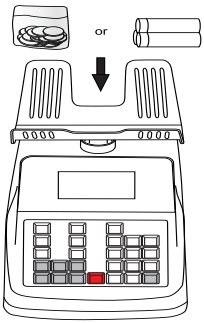

Keys and Display

The Keypad

To keep counting as easy as possible, the number and layout of keys on the keypad has been kept simple.

The ‘keys’ are ‘full motion’ similar to those on home computers. They have their functions printed on them. They are designed to resist spills and increase durability.

The Screen

This is where you will see:

- displays of the amounts counted
- messages related to Cashmaster functions

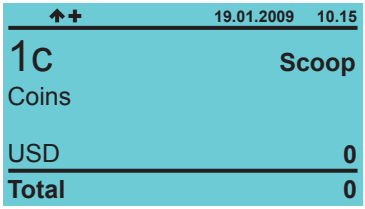

The Tray

The tray is designed to hold scoops, till cups, rolled coins, loose bills and banded bills. To insert, place the tray on the Cashmaster and **push down very firmly**, until your hear a click.

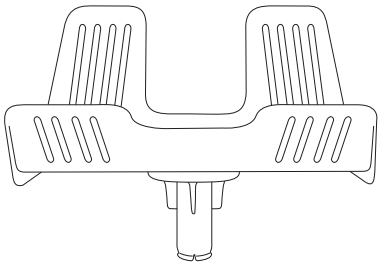

Cashmaster Key Identification

Cashmaster INTERNATIONAL

Key Idendification

The **ON/OFF** key. Press once to switch machine on. Press and hold down to switch machine off.

The **STRAPPED BILL** key. Push to select strapped bills and to toggle between loose / bundled/ clipped bills.

The **ROLLED COIN** key. Push to select rolled/loose coins.

UP and DOWN arrow keys. There are two sets of these keys, one set to toggle between bill denominations and another set to toggle between coin denominations.

The **PLUS** key. Used to add amounts to the total.

The **MINUS** key. Used to subtract the last value added from the total.

The **PRINT** key. Press once for a print out of the totals.

The **FUNCTION** key. In combination with other keys is used to control various settings.

The **CE** (CLEAR ENTRY) key. Push once to clear sub totals.

The **C** (CLEAR) key. Press and hold wait momentarily and press again to clear the total.

The **NEW TILL** key. Press this to save the current till and start a new one. And to also used to view tills.

NON CASH key. Use for manual entry of non cash items such as Checks, Credit, Debit, Gift vouchers and more.

The **ENTER** key. Use this for completing manual entries.

The **DECIMAL** key. Only supported in calculator mode.

NUMBER keys. Use these for completing manual entries.

Cashmaster Key Identification

Fast Keys

Fast key functions are easy access controls that allow you to quickly enter settings within the Cashmaster. More information is available on further pages.
To perform the fast key functions press both keys simultaneously.

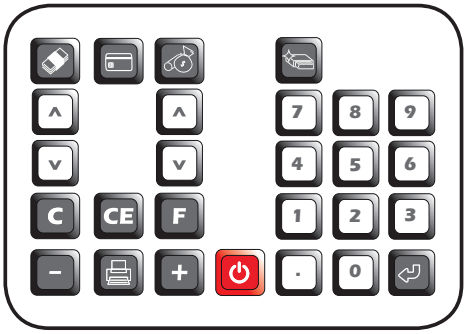

Bank Setting
Press and hold down the 'F' key and press the "Bill UP" key.
This will allow you to set the bank amount.

Bank On/Off
Press and hold down the 'F' key and press the "Coin UP" key.
This will allow your bank to be activated or deactivated.

Auto add
Press and hold the 'F' key and press the 'PLUS (+)' key. This will toggle Auto Add state. " + " will be displayed on the screen when Auto Add is on.

Auto Scroll
Press and hold the "F" key and press the "MINUS (-)" key. This will toggle AutoScroll state."▲" will be displayed on the screen when AutoScroll is on.

View Till
Press and hold the "F" key and press the "Till" key. This will display information for the current till.

Set time/date
Press and hold the 'F' key and press the 'Coin DOWN' key. This will enter the Time/Date setting. Use the coin up/down keys to toggle and use the "PLUS (+)" and "MINUS (-)" keys to increase and decrease.

Calibrate Scoop
Press and hold down the "F" key and press the 'ON/OFF' key and follow the onscreen instructions.

Grams mode
Press both the "Rolled Coin" key and "Strapped Bill" simultaneously. Use this function to weigh objects (max 1.5kg).

Calculator mode
Press and hold the "F" key and press the 'Enter' key. This will activate calculator mode. Use this function for adding/subtracting/multipling/dividing.

Contrast
Press and hold the "F" key and use the "up" (to increase) and "down" (to decrease) the contrast.

What you can count

BillS

	Loose - for counting loose bills. Loose bills are counted by placing up to 30 bills at any one time. Continue to add bills of the same denomination in quantities of up to 30, until all bills from the selected denomination have been counted.
	Bundles - for counting strapped bills that have been packed in a bunde.
	Clips - for counting strapped bills that have been packed in a clip.

COINS

	Rolls - for counting and checking rolls of coins.
	**Scoop or other container** - for counting loose coins that are on a scoop or other calibrated container.

OTHER

	Check - for inputting Check amounts.
	Coupons - for inputting coupon or voucher data.
	Other Cash - for inputting any other cash data. Such as, Credit, Debit, Gift, and other Non Cash items.

Getting Started

Switching on

Press

When the Cashmaster is initially switched on, it will ask for a store number. This number can be entered by using the numerical keys (max. 5 digits). Thereafter, the number will be stored in the memory of the machine, and will appear on any printouts from the machine. Should the number need to be changed at a later date, this can be done by phoning Customer Support.

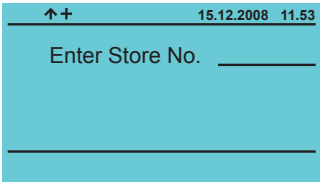

Use the numeric keypad to key in your store number, then press the key.

You are now at the main menu. If your Cashmaster has been set up to allow Pulls, you will have three choices. Otherwise, you will have only two.

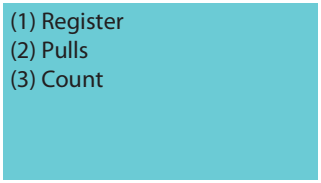

Register (option 1) allows the cashier to handle register banks and counts. All till counts are stored by register number and/or cashier and are held in the Cashmasters memory until deleted by the user.

Pulls (option 2) allows the cashier to handle counting of any bills and other cash items (e.g. checks or coupons) pulled or picked up from a register throughout a shift. All counts are stored by register OR cashier number and are held in memory until deleted by the user.

Count (option 3) allows counting of bills, coin and other cash items without any reference to a particular till. The count is cleared whenever the New count key is pressed or the Cashmaster is switched off.

Use the numeric keypad to select the count option required (1,2 or 3) and follow on screen prompts.

Setting the time and date

The clock facility on the Cashmaster must be set as follows when you receive the machine. From count screen:

1. Press and hold the F key and press the coin v key.

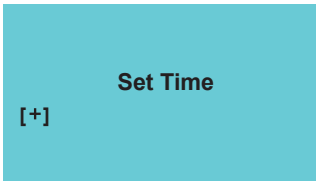

2. Press the + key to view the time set.

3. Use the coin ^ v to select hours or minutes

4. Then use the − or + key to increase and decrease.

5. To set the date press then ^ , and repeat as above,
(alternatively press F to return to normal operation.)

Getting Started

Setting Bank Mode

Press F and bill ^. The screen will then show:

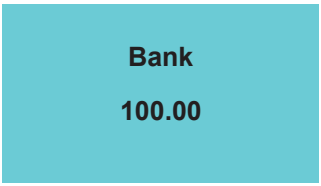

Use the numeric keypad to key in the bank value required.

When you are finished, press the ↵ key.

Switching Bank Mode On/Off

Once you have stored your default bank amount in memory, you can switch the bank mode on/off as required.

Press F and then coin ^

The display will show the current bank amount stored and you may begin counting in bank mode.

The bank function can be switched on/off at any time.

Indicates bank is on →

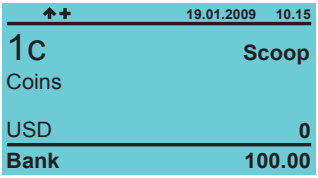

Indicates bank is off →

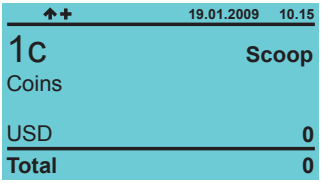

Switching Auto-Add On/Off

Auto add is a unique feature which allows the Cashmaster to automatically add the value of any bill/coin amount (which is placed on the tray) to the total amount.

If **Auto-Add is on**, the value displayed will be automatically added to the totals whenever the cash is placed on the tray.

If **Auto-Add is off**, the value displayed will not be automatically added to the totals, you must press [+] while the value is being displayed and the cash still on the tray, to add the value to the totals.

Your device may already have Auto Add set to on/off as default. See below

Indicates auto-add is on

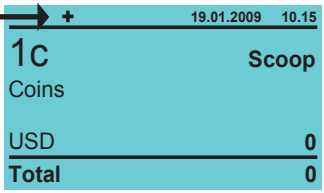

Indicates auto-add is off

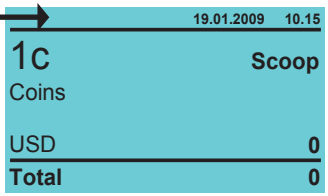

To switch Auto-Add on/off press [F] and [+] simultaneously

Getting Started

Switching Scroll On/Off

Auto Scroll feature allows the Cashmaster to automatically advance to the next denomination when the value has been added to the total and the money is removed from the tray

If **Auto-Scroll is on**, once cash is removed from the tray the denomination will automatically be advanced.

If **Auto-Scroll is off**, the value displayed will not automatically advance denomination, you must manually select the next denomination required using the keys.

Your device may already have Auto scroll set to on/off as default. See below

Indicates auto-scroll is on

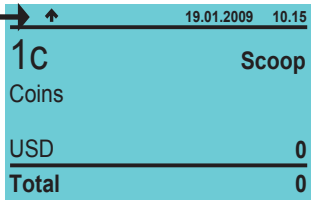

Indicates auto-scroll is off

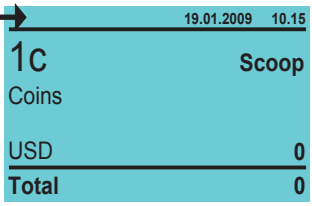

To switch auto-scroll on/off press and simultaneously.

Counting loose coin

Press the coin ^ until the following is displayed.

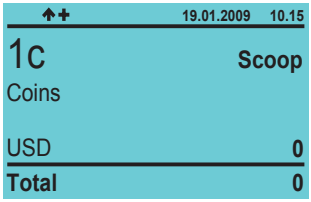

If the denomination is not the one you want, press coin ^ or v until you reach the correct one.

Place the cup of the selected coins on the tray; the Cashmaster will beep and the display will show the value of the coin and the number of coins in the cup:

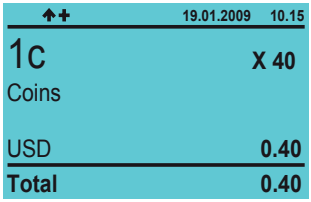

If **Auto Add is on**, remove the cup from the tray. The Cashmaster will update the totals, beep to confirm the add, advance to the next denomination in the sequence.

If **Auto Add is off**, leave cup on the tray and press + to add to the total;

Repeat above steps for each denomination of coin. To skip a denomination,

press coin ^ or v .

Note: If bank mode is on, the bank amount will decrease as more money is counted, it will be displayed at the bottom of the screen; once the bank amount has been reached your Cashmaster will signal with a double beep, the screen will show the total amount for the day; the bank value has already been taken into account.

Counting

Counting Rolled Coin

Press the key until the following is displayed.

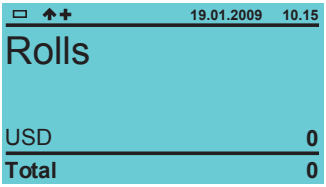

Place a roll of coins on the tray. If the roll is full the Cashmaster recognises the weight then the denomination, together with the value, is shown on the display. For certain denominations of rolls the display will show:

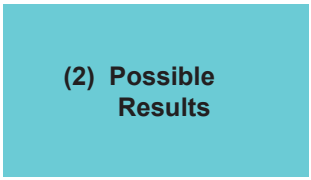

You are required to select the denomination of the roll which is on the Cashmaster using the coin or . Press the key to accept the value.

If the machine does not recognise the weight as a full roll the following will be displayed.

then

Using the coin and keys, select the actual coin denomination and the machine will then display the value together with the number of coins in the roll.

Press the key to accept the value and add to the grand total.

To exit this mode press the key.

Learning - Bills Only

Ensure that the display indicates bill counting mode. Press bill *to select loose bill mode.*

All Cashmaster machines are calibrated at the factory to the average bill weights of all UK currency. As bill weights vary slightly depending on age and usage, the following should be completed on receipt of your new machine.

*(**Please ensure Auto Add/Scroll has been switched off** before beginnning "Learning" see page 13 and 14. This process is required for the cashmaster to count faster.)*

1. Press bill or until you reach the bill denomination required.
2. Place 8 -10 bills of the chosen denomination on the tray.
3. When the Cashmaster beeps add some more bills.
4. Remove all bills from the tray.
5. Repeat steps 2 - 4 several times and each time try to increase the number you can apply in one slice. After repeating a few times you should be able to apply 25 - 30 bills in one go.

If the display shows :

remove a few until you see a valid reading, then continue.

Counting

Counting Loose Bills

Ensure that the display indicates bill counting mode (as below). If it doesn't, press bill ^ to select loose bill mode.

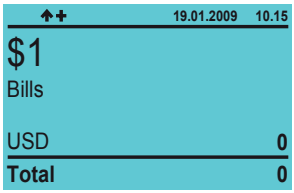

If the denomination is not the one you want, press bill ^ or v until you reach the correct one.

Place bills of the selected denomination on the tray.

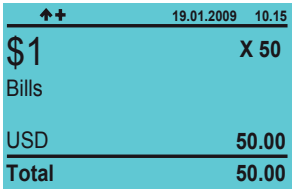

Bills should be applied in slices of up to 30 bills at a time. The device is constantly learning, if too many bills are applied this message will be displayed.

Simply remove a few bills until the message disappears, then continue adding bills to those already on the tray.

When all bills of the current denomination have been applied and :

Repeat above steps for each denomination of bill. To skip a denomination, press bill ^ or v.

Counting Strapped Bills

The Cashmaster will count strapped bills including; bundles and Clips.
Select Strapped Bills by pressing the key.

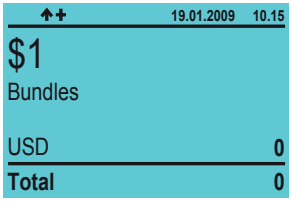

If the denomination is not the one you want, press bill or until you reach the correct one.

Place the strapped bills on the tray. The Cashmaster accepts bundles of $1, $2, $5, $10, $20, $50, and $100.

If the strapped bills are good, its value is displayed:

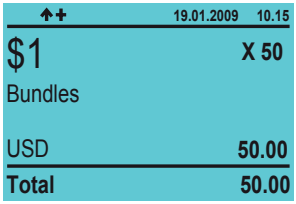

Repeat above steps for all strapped bills to be counted.

If a strapped bundle is suspect, the display will show :

You must open the strapped bundle and count the bills in loose bill mode.

To return to loose bill counting, press the key.

Non Cash Items

The Cashmaster allows manual entries for four types of Non-Cash items.

To enter Non-Cash values during a count, press the key.

You should see a screen similar to the following:

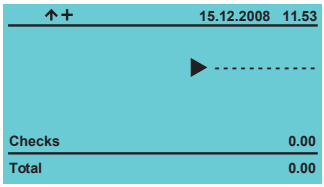

Use to switch between non cash items, i.e. Checks, Credit, Debit and Gift, etc.

Use the numeric keypad to enter the values. This will appear in the top right hand corner of the display:

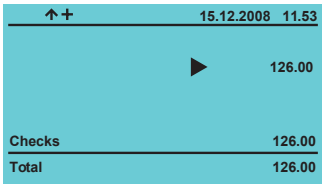

If the value is correct, press the key and it will be added to the Grand

Total. If you make a mistake, press the key to clear the value.

Pressing key again will scroll to next non-cash item.

To exit press either the Strapped/Rolled keys, or .

Storing/Viewing Tills

To start/save a new till, press the key (while in count mode), and follow the on screen to options.

You can view saved till information in Register or Pulls.
Enter (1) Register or (2) Pulls from the main menu,

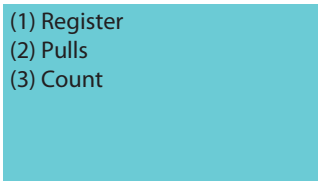

Then press the key. You will then see the Till Select screen (see example below).

Use the and arrows to select the till you wish to view.

Then press the key.

On the following screen, use the and arrows to scroll through the denominations and their values.

To print the information for this till press the key. You can print at any time whilst in count mode by pressing the print key.

To return to the main screen press the key once.

Totalling, Clearing & Printing

Adding

To add a value, currently on the display, to the total press the key.

Auto Adding/Scrolling

For auto adding and auto scrolling see page 13 and 14.

Subtracting

To subtract the last value added to the total, press the key while the value is still being displayed and the money is still on the machine.
For negative manual entries press key once value is entered.

Subtotals

To find out the subtotal of any denomination select the denomination required. The display will show the subtotal for the denomination shown and the number of pieces.

Clearing Sub-Totals

Select the denomination to be cleared by using and keys then press the key.

Clearing Totals

Press and hold the key until screen prompt shows “Press C key again to confirm.
To clear the totals now press the key again. To cancel clearing press any other key.

Printing

Providing a printer is connected, print the totals by pressing the key.

Note: When using the printer it is always advisable to operate the machine with the mains adapter connected.Clearing totals

Grams/Calculator Mode

Grams Mode

Grams mode can be used to :

1. Weigh and/or directly compare bundles of bills.
2. Check that the scale is weighing correctly by applying a weight known to be accurate.

To enter grams mode :

Press and at the same time.

If the cashmaster drifts from 0.0g when the tray is empty, press to reset scale to zero.

To exit grams mode and return to normal operation :

Press and again.

NOTE: The maximum weight the Cahsmaster can weigh is 1.5kg.
Do no put any weight above this on the Cashmaster.

Calculator Mode

To enter calculator mode:

Press and . Enter figures using the numberpad.

- Use to multiply.
- Use to divide.
- Use as the equals key.

To exit calculator mode and return to normal operation :

Press and again.

Troubleshooting

Mode	Message	Description
Coins		
Loose/ Rolled	Too much weight on scale	This means there is too much weight on scale, simply remove some. The Cashmaster will weigh up to a maximum of 1.5kg.
Roll	* Suspect *	Roll applied is suspect. User may leave roll on tray and select the correct denomination for the actual roll amount.
Bills		
Loose bill counting	PRESS ZERO KEY	Cashmaster has drifted from zero (usually due to draught or vibration). Ensure the tray is empty, then press on/off key.
Loose bill counting	Please remove scoop/till cup from scale	Please remove scoop/till cup from the scale User has selected a bill denomination while the cup is still on the tray. Remove the scoop/till cup.
Loose bill counting	Too many Remove some	Bills should be applied in amounts of up to 30 at a time. Simply remove a few bills until the message disappears then continue counting
Strapped	* Suspect *	Bundle applied is suspect. User must split bundle and count in loose bill mode.
Misc		
	High vibration lockout	Check that the Cashmaster is placed on a level surface and away from draughts (e.g. air conditioning or fan).
	Battery low	Plug machine into power supply to recharge battery.
	Print timeout	Ensure that printer is switched on and properly connected to the scale before retrying.
	Scale is below minimum weight!	Indicates that the tray has not been placed correctly. Ensure tray is pushed firmly into the Cashmaster.

How do I clear sub totals?

Select the desired denomination and press

key once.

How do I clear grand totals for one till?

From the count screen hold down the

key until the confirmation is displayed. Press the

key again to confirm and clear.

How do I clear grand totals for all tills?

From the main screen hold down the

key until the confirmation is displayed. Press the

key again to confirm and clear.

How do I switch currencies?

Press both
keys simultaneously to scroll through multicurrency options, stopping at the desired currency.

How do I access/leave grams mode?

Press simultaneously the
key and the
key.

How do I update the firmware?

1. Ensure that the machine is turned off.
2. Remove cover located to the left underneath the machine.
3. Insert the SD card in slot marked "SD-CARD".
4. Connect the machine to the power adapter.
5. Press and hold down the
key for approximately 10 seconds
6. The serial number will be displayed.
7. Press the
keys simultaneously and the update will commence, please allow up to 2 minutes for prompt to remove the SD card.
8. Remove the SD card.

FAQ's

The SUSPECT ROLL message displayed

Roll applied has a suspect weight – select the correct denomination by using the arrow keys.

What is the maximum weight the machine can weigh?

1.5kg.

What do I do if my printer does not work?

1. Ensure printer is connected to machine
2. Ensure printer has power
3. Ensure printer is loaded with paper
4. Ensure paper grip lever is in downward position

How do I change the contrast on the screen?

Press the

and

key simultaneously and press either

or

to increase or decrease contrast respectively.

What are the typical "full" Strapped/Rolled quantities?

Strapped Bill Quantities

Denomination	Type	Quanity
$100	Bundle	10, 20, 25, 50, 100
	Clip	10
$50	Bundle	10, 20, 25, 50, 100
	Clip	10
$20	Bundle	10, 20, 25, 50, 100
	Clip	10
$10	Bundle	10, 20, 25, 50, 100
	Clip	10
$5	Bundle	10, 20, 25, 50, 100
	Clip	10
$2	Bundle	10, 20, 25, 50, 100
	Clip	10
$1	Bundle	10, 20, 25, 50, 100
	Clip	10

Rolled Coin Quantities

Denomination	Type	Quantity
100c	Roll	-
50c	Roll	-
25c	Roll	40
10c	Roll	50
5c	Roll	40
1c	Roll	50

These Roll quantities are default from factory settings that the cashmaster will recognise automatically. For Rolls outwith these quantities the user is required to select the denomination manually using the coin up/down keys.

For all other problems or issues contact our Customer support (toll free) on:
1 - 877 - CASHMAS

Technical Specification

Cashmaster Omega 230 Specification

Weight	1.2kg
Dimension	162mm (W) x 188mm (H) x 282mm (D)
Load Capacity	1.5kg
Power Supply	Mains adapter 12V 2.5A
LED red:	Battery charging
LED Green:	Battery fully charged
LED flashing red/green:	Very low battery and charging
LED off:	Power from battery only
Battery Type	LiPo 7.4V 1250mAh

Customer support (toll free): 1 - 877 - CASHMAS

serviceusa@cashmaster.com

www.cashmaster.com

For all Customer Support/Warranty issues please contact our Customer support (toll free) on: 1 - 877 - CASHMAS

Declaration of Conformity

EC Declaration of Conformity

Cashmaster Sigma models manufactured in Scotland, Rosyth are in conformity with the provisions of the following European Directives:

89/336 and 93/68/EEC Electromagnetic Compatibility Directive
73/23 and 93/68 /EEC Low Voltage Directive

FCC Compliance Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circut different from the one which the receiver is connected to.
- Consult the dealer or an experienced radio/TV technician for help.

You are cautioned that changes or modifications not expressly approved by the party responsible for compliance could void your authority to operate the equipment.

Approvals

ISO9001:2000

N13203

Complies to EU Directive, 2002/95/EC

RoHS 2002/95/EC

Complies with EU Directive 2002/96/EC on the restriction of hazardous substance in electrical & electronic equipment

---

Signed for Cashmaster Ltd

Douglas Reid
Engineering Director

Bill Hamilton
Technical Director

Contact Details

Head Office (UK)
Innovation Buildings
Fairykirk Road
Rosyth, Fife
KY11 2QQ
SCOTLAND

t: +44 (0) 1383 416 098
f: +44 (0) 1383 411 904
info@cashmaster.com

Cashmaster Turkey
Istanbul HERTEL
Bagdat Caddesi Burc Sitesi
No:123 / 7
Feneryolu
ISTANBUL 34724

t. +90 216 348 6555
t. +90 533 566 5707
f. +90 216 348 6646
hakan@cashmaster.com

Italy Office
Via Duchessa Galleria 26
15076 Ovada Alessandria
ITALY

t: +39 (0) 143 835 636
f: +39 (0) 143 835 639
office.italia@cashmaster.com

Spain Office
C/ JAUME ISERN, 20 bajo
(local interior), Mataró
Barcelona 08302
SPAIN

t: +34 (0) 937 999 319
f: +34 (0) 937 589 816
spain@cashmaster.com

France Office
12 Rue D'Ingré
45380 La Chapelle St Mesmin
FRANCE

t: 0800 904 936
t: +33 (0) 2 38 43 78 63
f: +44 (0) 2 38 88 61 37
france@cashmaster.com

Poland Office
Litewska
30-014 Kraków
POLAND

t: +48 (0) 12 2945701
f: +48 (0) 12 2945711
biuro@cashmaster.com

USA East Coast Office
Orange Blossom Center
2593 N. Orange Blossom Trail
Kissimmee
FL 34744
USA

t: 1-877-CASHMAS
f: + (1) 407 847 7993
serviceusa@cashmaster.com

USA West Coast: (CAS0055)
4415 Yeager Way
Suite 300
Bakersfield
CA 93313
USA

Tel : 1-877-CASHMAS
Fax : + (1) 661 397 4288
usa@cashmaster.com

Germany Office
Poststr.3
52445 Titz-Hasselsweiler
GERMANY

t: +49 (0) 246 3 999 339
f: +49 (0) 246 3 999 338
germany@cashmaster.com

www.cashmaster.com